




Engine oil pressure check

🔑 12.90.09.01

Check

1. Remove oil pressure switch.
👉 **ENGINE - V8, REPAIRS, Switch - oil pressure.**

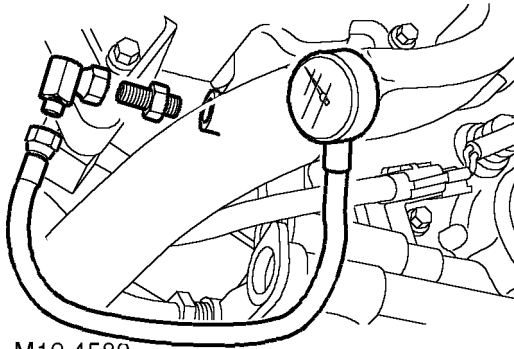

M12 4589

2. Connect pressure check kit **LRT-12-052B** adaptor and gauge to oil pressure switch position on timing gear cover.
3. Check and if necessary top up engine oil.
4. Run engine at idle speed and check that oil pressure is within limits given.
👉 **GENERAL DATA, Engine - V8.**
5. Switch off ignition.
6. Remove pressure check kit **LRT-12-052B**.
7. Clean oil spillage.
8. Fit oil pressure switch.
👉 **ENGINE - V8, REPAIRS, Switch - oil pressure.**

Adjust

1. If engine oil pressure is below figures given, check condition of oil pump and/or main and big end bearings.