

## Wiring diagrams


*Note:* On vehicles to the North American specification, the connections at the lighting switch are such that the sidelamps are extinguished when the headlamps are in use.

### Key to cable colours

B—Black    N—Brown    R—Red    W—White  
G—Green    P—Purple    U—Blue    Y—Yellow  
RN—Red with brown and so on.

---

### Key to Fig. P-9

- |    |   |    |  |
|----|---|----|--|
| 1  | Rear number plate light                 | 20 | Current control box  |
| 2  | Stop, tail lamps                        | 21 | Fuse box (35 amp. fuse)  |
| 3  | Snap connectors for number plate light  | 22 | Heater plug warning light  |
| 4  | Ammeter                                 | 23 | Headlamp dipper switch   |
| 5  | Fuel level gauge                        | 24 | Starter  |
| 6  | Headlamp main beam warning light        | 25 | Starter solenoid switch  |
| 7  | Dynamo warning light                    | 26 | Dynamo   |
| 8  | Panel lights                            | 27 | Horn   |
| 9  | Panel light switch                      | 28 | Horn push  |
| 10 | Speedometer                             | 29 | Junction box   |
| 11 | Electrical services and lighting switch | 30 | 6-volt batteries (positive earth)  |
| 12 | Fuel level warning light                | 31 | Headlamps  |
| 13 | Oil pressure warning light              | 32 | Main beam  |
| 14 | Oil pressure switch                     | 33 | Dip beam   |
| 15 | Windscreen wiper plug and socket        | 34 | Side lamps   |
| 16 | Windscreen wiper                        | 35 | Starter and heater plug switch   |
| 17 | Fuel tank level unit                    | 36 | Resistance for heater plug   |
| 18 | Stop lamp switch                        | 37 | Heater plugs   |
| 19 | Inspection lamp sockets                 | 38 | Snap connectors shown thus  |