



Fig. N1-15. Circuit diagram, 6 cylinder 'Long' and Station Wagon, Petrol models, negative earth, with headlamps mounted in front wings

- |                                          |                                                                  |
|------------------------------------------|------------------------------------------------------------------|
| 1 Starter motor                          | 31 Warning light, oil pressure                                   |
| 2 Solenoid, starter motor                | 32 Warning light, cold start                                     |
| 3 Horn                                   | 33 Voltage stabiliser, 10 volt, fuel gauge and temperature gauge |
| 4 Horn push button                       | 34 Switch, stop lamp                                             |
| 5 Inspection lamp sockets                | 35 Switch, wiper                                                 |
| 6 Panel illumination                     | 36 Switch, cold start, on control                                |
| 7 Panel illumination                     | 37 Fuel gauge                                                    |
| 8 Switch, panel lights                   | 38 Water temperature indicator                                   |
| 9 Tail lamp, RH                          | 39 Wiper motor                                                   |
| 10 Tail lamp, LH                         | 40 Dual fuel pump                                                |
| 11 Side lamp, RH                         | 41 Distributor                                                   |
| 12 Side lamp, LH                         | 42 Switch, oil pressure                                          |
| 13 Headlamp, RH, dipped beam             | 43 Switch, cold start, in cylinder head                          |
| 14 Headlamp, LH, dipped beam             | 44 Fuel tank unit                                                |
| 15 Headlamp, LH, main beam               | 45 Water temperature transmitter                                 |
| 16 Headlamp, RH, main beam               | 46 Stop lamp, LH                                                 |
| 17 Warning light, main beam              | 47 Stop lamp, RH                                                 |
| 18 Battery                               | 48 Socket, wiper lead                                            |
| 19 Switch, ignition and starter          | 49 Front flasher, RH                                             |
| 20 Switch, lights                        | 50 Rear flasher, RH                                              |
| 21 Switch, headlamp dip                  | 51 Rear flasher, LH                                              |
| 22 Dynamo                                | 52 Front flasher, LH                                             |
| 23 Fuse, A1-A2                           |                                                                  |
| 24 Fuse, A3-A4                           |                                                                  |
| 25 Feed, interior light, where fitted    |                                                                  |
| 26 Indicator unit, flashers              |                                                                  |
| 27 Switch and warning light for flashers |                                                                  |
| 28 Regulator box                         |                                                                  |
| 29 Warning light, ignition               |                                                                  |
| 30 Ignition coil                         |                                                                  |

Snap and Lucar connections

Earth connections via terminals or fixing bolts

Earth connections via cables

### Cable colour code

B—Black P—Purple W—White R—Red N—Brown Y—Yellow U—Blue G—Green O—Orange S—Slace L—Light